

**Digital Lock SAFE**

# **i** NSTRUCTION



Quality reputed worldwide

***diplomat* SAFE** 



[www.dsafeco.kr](http://www.dsafeco.kr)

# HOW TO OPERATE *diplomat* DIGITAL LOCK?

## How to open ?

- Slide the battery housing cover to the right to open and load batteries. (1,5V AA Alkaline 4 pcs)  
Then, LED flickers with the sound of Bi Bi Bi Bi.
- The initial code from the factory is 1 2 3 4.

Step 1 : Push Start Button **C** (LED flickers with Bi sound)

Step 2 : Push the entered Code (LED flickers with Bi sound)

Step 3 : Push Finish Button **#** (Melody rings)

Step 4 : Turn Knob (or Handle) clockwise and open door while melody rings.

In case that wrong code is entered, it sounds Bi Bi Bi Bi.  
If wrong codes are attempted over 5 times, the lock gets paralysed and doesn't work.

## How to release the lock from paralysis?

- ▶ Enter the original code twice consecutively as in opening procedure. (No sound but LED flickers when button pushed. If procedures are followed exactly, melody rings and the lock recovers.)

EX) **C 1 2 3 4 # C 1 2 3 4 #** (Melody rings)

## How to enter your personal code ?

(Two different codes are available.)

### 1st Code

Step 1 : Push Memory Button **M** in door back.  
(LED flickers with Bi sound)

Step 2 : Push Button **1** (LED flickers with Bi— sound)

Step 3 : Push Button **#** (Melody rings)

Step 4 : Enter the 1st Code (4 digits min to 16 digits max)

Step 5 : Push Button **#** (Melody rings)

EX) In case of Personal Code 1 2 3 4, push buttons

**M 1 # 1 2 3 4 #**

## 2nd Code

Step 1 : Push Memory Button **M** in door back.  
(LED flickers with Bi sound)

Step 2 : Push Button **2** (LED flickers with Bi— sound)

Step 3 : Push Button **#** (Melody rings)

Step 4 : Enter the 2nd Code (4 digits min to 16 digits max)

Step 5 : Push Button **#** (Melody rings)

EX) In case of Personal Code 5 6 7 8, push buttons

**M 2 # 5 6 7 8 #**

**▲ Caution : To confirm if the code is exactly entered, push the code in opening procedures prior to closing door.**

**For example, in case of your code 5 6 7 8, push button **C 5 6 7 8 #**. If the procedure is properly done, melody rings for three seconds.**

## When to replace batteries ?

If door is not opened in spite of exact code (LED flickers with sound and melody), it indicates that battery is not strong enough to actuate solenoid. Then, four batteries should be replaced all together with new ones, (1.5V AA Alkaline 4 pcs)

- The personal code is not erased even if battery is completely exhausted.
- Battery life span : 2 years (In case of door openings 3 times a day)



# SAFE AND SOUND

## PART NAME



Home Safe



Office Safe

*diplomat*  
SAFE LTD 

1583-4 SONGJUNG-DONG GANGSEO-GU BUSAN, KOREA TEL (82 51) 831-4400 FAX (82 51) 831-4409  
Email : [info@dsafe.co.kr](mailto:info@dsafe.co.kr) [www.dsafe.co.kr](http://www.dsafe.co.kr)

\* To improve products constantly, Diplomat Safe reserves the right to alter the specifications without prior notice.  
Printed in Korea, July 13, 2005 REV. 2