


HOW TO OPERATE DIPLOMAT E-D-L SAFE?

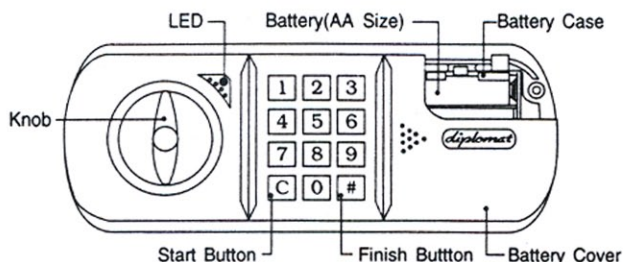

How to Open?

Before pushing buttons, slide Battery Housing Cover to the right to open, and load 4 pcs of 1.5V Alkaline batteries in the battery case. The initial code from the factory **1 2 3**.

- Step 1 Push Start Button **C** (LED lights with 'Bi' sound).
- Step 2 Push Initial Code **1 2 3** in sequence (Whenever each button is pushed, it sounds 'Bi').
- Step 3 Push Finish Button **#** (You hear a melody).
- Step 4 Turn Knob clockwise to open door while melody goes on.

* Note : In case of wrong code, you hear a 'Bi Bi Bi Bi' sound. If wrong code tried over 3 times, lock gets frozen and keeps quiet until it is released.

* How to release frozen lock?

With the original personal code, proceed the above opening steps (1 to 3) twice consecutively (You hear a melody).

Ex) (**C 1 2 3 # C 1 2 3 #**)

How to Enter Your Personal Code?

- Step 1 Push Memory Button **M** on the backside of the door. (LED lights with 'Bi' sound).
- Step 2 While LED lights on, enter your personal code by pushing f.i. **1 9 9 8** in sequence (Max. 17 digits)
- Step 3 Push Finish Button **#** (You hear a melody).

* Warning : In order to confirm if the personal code is correctly entered, please try to open the door using the new personal code prior to closing door.

* Brief : In case of Personal Code 1998, **M 1 9 9 8 #**

When and How to Replace Battery?

- When Start Button **C** pushed, if there sounds a series of 'Bi Bi Bi Bi', or the door is not opened in spite of normal LED flash with melodic tone, it indicates that the batteries have to be replaced (Use 1.5V Alkaline AA size, 4 pcs)
- The entered code will NOT be erased, even if battery is completely exhausted.