

Advanced Diplomat Digital Lock

I NSTRUCTION

for DIGITAL LOCK



EDL77M
H25M(Deeper) / H200M

Quality reputed worldwide ———

***diplomat* SAFE** ▲

www.dsafekr.com

H25M(Deeper) / H200M

1. How to open your safe ?

- Slide the battery housing cover to the right to open and load batteries. (1.5V AA Alkaline 4pcs) Then, LED flickers with Bi Bi Bi sound.



- The initial code from the factory is **1 2 3 4**.

Step 1 : Press **C** button (LED flickers with Bi sound)

Step 2 : Press the Code buttons (LED flickers with Bi sound)

Step 3 : Press **#** button (LED flickers on with melodic tone)

Step 4 : Then, the door opens automatically (LED flickers on with melodic tone)

- Note : ① In case that wrong code is tried, it sounds Bi Bi Bi Bi.
② If wrong codes are tried over 5 times, the lock gets paralysed and doesn't work.

How to release the lock from paralysis?

- ▶ Enter the original code twice consecutively as in the opening procedure. (No sound but LED flickers when each button pressed. If the procedures are completed exactly, the lock recovers with melodic tone).

EX) **C 1 2 3 4 # C 1 2 3 4 #** (LED on, Melodic tone)

2. How to close your safe ?

Step 1 : Keeping door closed

Step 2 : Press **C** button (LED flickers with Bi sound)

Step 3 : Press the Code buttons (LED flickers with Bi sound)

Step 4 : Press **#** button (LED flickers on with melodic tone)

Step 5 : Then, the door closes automatically (LED flickers on with melodic tone)

- ▲ Caution : Without keeping door closed, if **#** button is pressed, the motor doesn't return the boltwork into the housing leaving door open. (It sounds Bi Bi Bi Bi)

3. How to enter your personal code ?

★ M ▶ New Code ▶ # in Door opened

Step 1 : Press Memory button **M** on the door back.
(LED flickers on with Bi sound)

Step 2 : Press New Code buttons
(4 digits min to 16 digits max, LED flickers on with Bi sound)

Step 3 : Press **#** button (Melodic tone)

EX) If a new code is decided 2 1 0 0, press buttons as below.

M 2 1 0 0 # (Melodic tone)

4. When to replace batteries ?

If door is not opened in spite of exact code entered (LED flickers with sound and melodic tone), it indicates that battery is not strong enough to actuate the solenoid. Then, four batteries should be replaced all together with new ones. (1.5V AA Alkaline 4 pcs)

- The personal code is not erased even if battery is completely exhausted.
- Battery life span : 1 year 6 months (In case of three door openings a day)



1583-4 SONGJUNG-DONG GANGSEO-GU BUSAN, KOREA TEL (82 51) 831-4400 FAX (82 51) 831-4409
E mail : info@dsafe.co.kr www.dsafe.kr

• To improve products constantly, Diplomat Safe reserves the right to alter the specifications without prior notice.
Printed in Korea, May 27, 2011 REV. 3